

 
PATROLEYES **FLIP**



USER MANUAL

Please read the user manual carefully before using this product.



▶ Product illustration

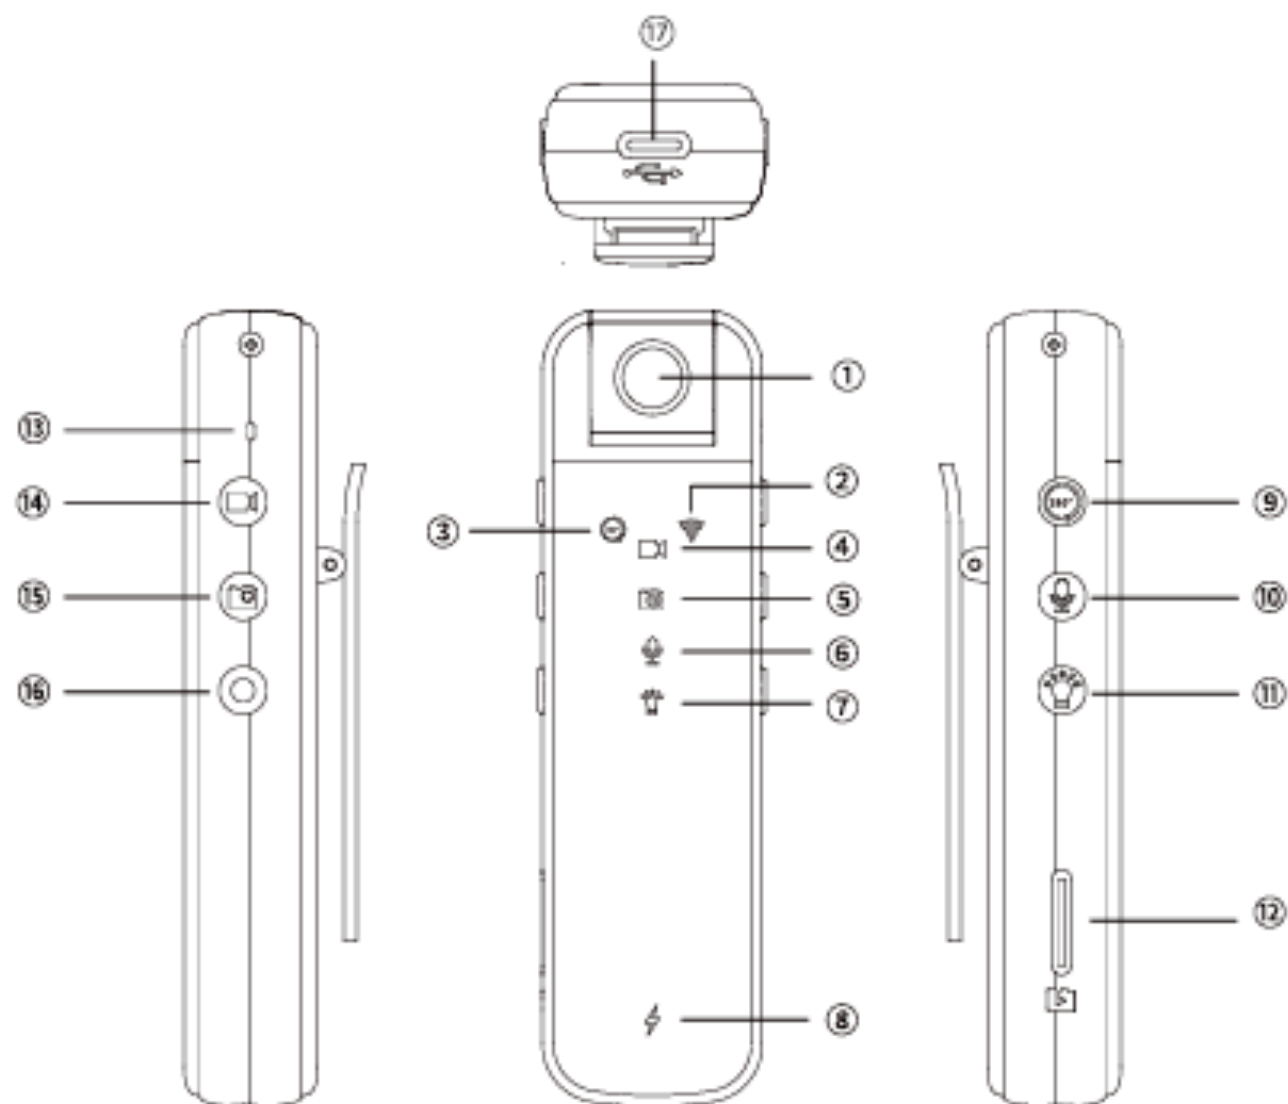

- | | | |
|-------------------|-----------------------|-----------------------|
| ① Camera Lens | ② WiFi Activity LED | ③ Video Rotation LED |
| ④ Recording LED | ⑤ Photo Mode LED | ⑥ Recording Indicator |
| ⑦ IR Activity LED | ⑧ Charging Activity | ⑨ Video Rotate |
| ⑩ Record Button | ⑪ Night Vision Button | ⑫ SD Card Slot |
| ⑬ Mic | ⑭ Video Button | ⑮ Photo Button |
| ⑯ Power Button | ⑰ USB-C Port | |


► Mode of use

The camera lens can be rotated 180° depending on your usage

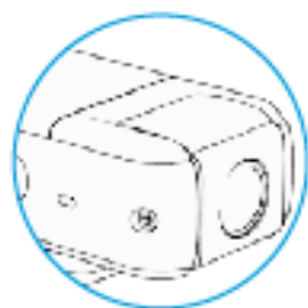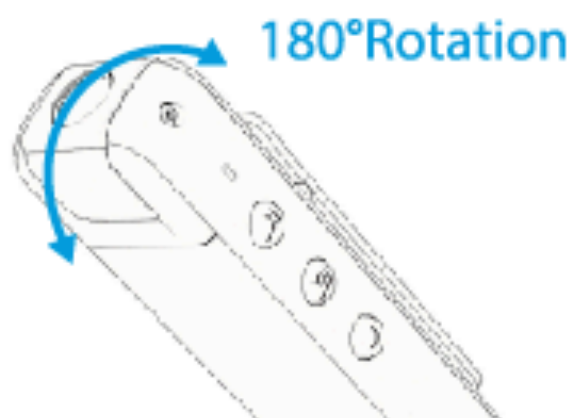





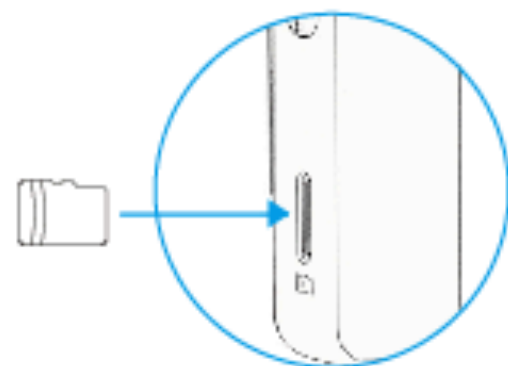

► Installing a Micro SD card








- ① Insert Micro SD card as shown in figure
- ② Supports up to 256GB Micro SD card



Button description

Power		Long press	Long press to turn on and long press again to turn off.
Photo		Short press	Tap to enter photo mode.
Record		Short press	Press to start recording. Press again to stop recording.
Motion		Long press	Press and hold in video mode to enable motion detection.
IR LED		Short press	Press to turn on the IR LEDs.
Audio		Short press	Press to start recording. Press again to stop recording.
Rotate		Short press	Press to flip the image 180°.
WiFi on and off		Long press	Press to enable WiFi, and press to disable WiFi when WiFi is enabled.

Indicator description

Video LED		Steady on: Video standby mode Fast flashing: Motion detection
Camera LED		Flashes when a picture is taken.
Recording LED		Steady on for standby mode, Slow flash is recording.
Night vision indicator LED		Steady on indicates IRs are enabled.
WiFi indicator LED		Steady on indicates WiFi is enabled.
Rotate LED		When it is on, the image is flipped 180°. When it is off, the image is set to the default position.
Charging indicator LED		Steady on indicates the unit is charging. When fully charged the light will turn off.

Basic operating instructions

① Powering on

First install a micro SD card into the device. Press and hold the power button to turn the device on. The blue light will flash 3 times. The device will automatically power off after 1 minute of inactivity if not recording.

② Powering Off

Press and hold the power button to turn the device on. The power button LED will blink 3 times before shutting down.

③ Video Rotating

Make sure that you have pressed the video rotate button if you have flipped the lens to a different orientation.

WiFi operating instructions

① Turn on WiFi

Press and hold Rotate/Wifi button to turn on WiFi.

WiFi is on and enabled when you see the WiFi LED on.

② Turn off WiFi

Press and hold the Rotate/Wifi button until the WiFi LED turns off.

When the WiFi is enabled, simply open your phones network settings and connect to the network that starts with CS. There is no password for this network. Now open up the phone app and you will be automatically connected and can control your camera. You will need to enable all permissions on the app during the install process to ensure it works properly.

▶ Connecting to a computer

Simply turn the device on and plug it into your computer using the included USB cable. It will show up as a removable device in My Computer/This PC.

▶ Resetting

To reset the device press and hold the power button for 10 seconds. Once reset, the device will automatically turn off. No data will be lost if you reset the device with an SD card inserted.

Scan to download mobile app



Android



IOS



Google

For support please contact
support@patroleyes.com