



PV-RC300W
WI-FI 1.3M pix Cam Matchbox DVR
Quick Guide

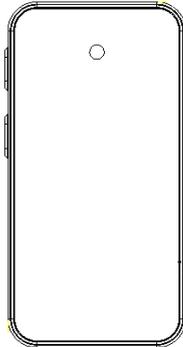

A. Regarding the Device

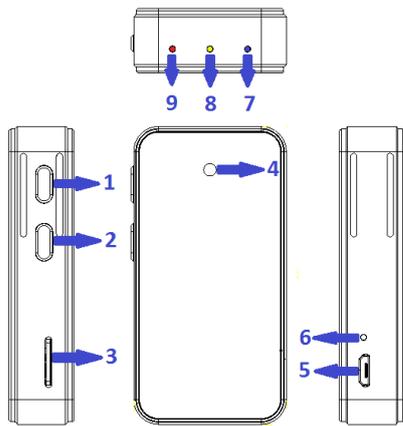

 
1. Power On/Off Button & WI-FI On/Off
2. REC Button & Client Button & WI-FI Reset
3. Memory Card Slot
4. Camera Lens
5. USB Charge
6. Charge LED
7. Power On LED
8. WI-FI & Client LED
9. REC & No SD Card LED

B. Power Charging

- 1) Connected the USB cable to ⑤ then connected the cable to USB Plug.
- 2) The ⑥ will showed Orange LED light on, The Orange LED light will off when the device is fully charged.

C. Insert the MicroSD Card

- 1) Place and remove the Micro SD Card from the slot properly.



D. Clip



- 1) Power On : Hold the button ① till it showed blue Light, the device is power on when the blue light is on.
- 2) Power Off : Hold the button ① till blue light is blinking, wait for blue light is off the device is off.
- 3) WI-FI On/Off : Press button ① to turn on WI-FI or turn off WI-FI. (The WI-FI is on when the device is power on and it start recording.)
- 4) REC On/Off : Press button ② to turn on REC or stop REC. (The WI-FI is on when the device is power on and it start recording.)
- 5) Reset WI-FI Default : Hold the button ② for 10 sec.

F. LED Light

- 1) Blue LED Light Blinking : Power On
Blue LED Light On : Stand By
Blue LED Light continuous flash 2 times : Lower Power
- 2) Green LED Light On : WI-FI On
Green LED Light Off : WI-FI Off
- 3) Red LED Light On : Please check the SD card. (Can't recognize the card or lack of memory)
Red LED Light Blinking : Recording
- 4) Orange LED Light On : Power Charging
Orange LED Light Off : Fully Charge

H. APP download QR Code (Scan the QR code to download the APP or directly type & search "SecurePro" in App store or Google play for installation)




App Store




Google play

I. Establish WIFI connection (Android)

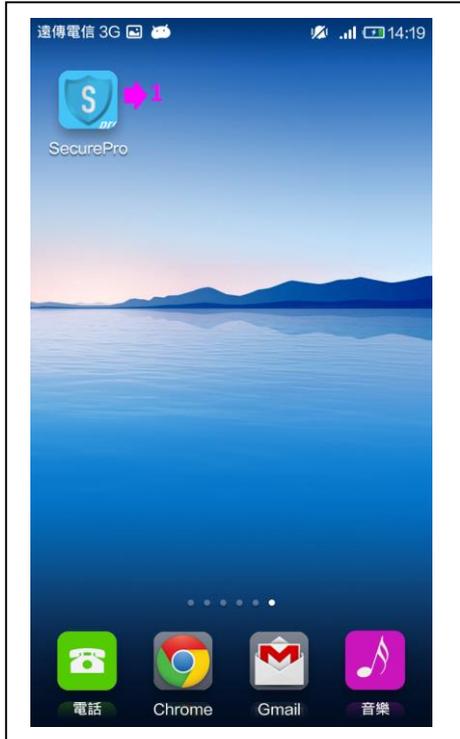


1) Start your smartphone APP.

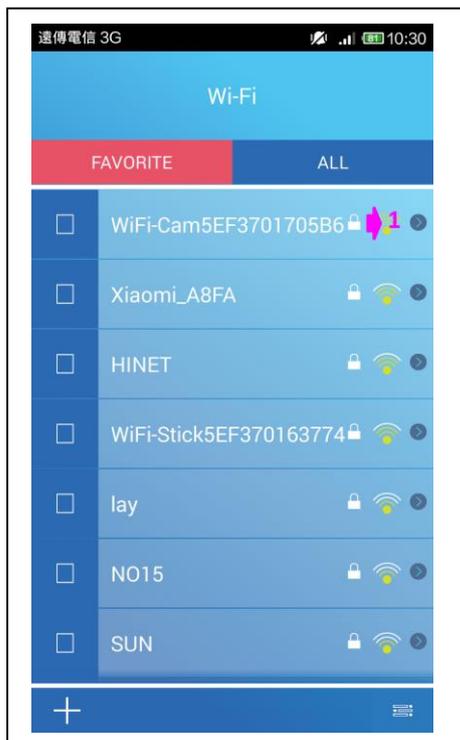


1) Choosing the device's WI-FI which you need to connect.

1) Enter the password.

(The factory initial password is 123456878.)

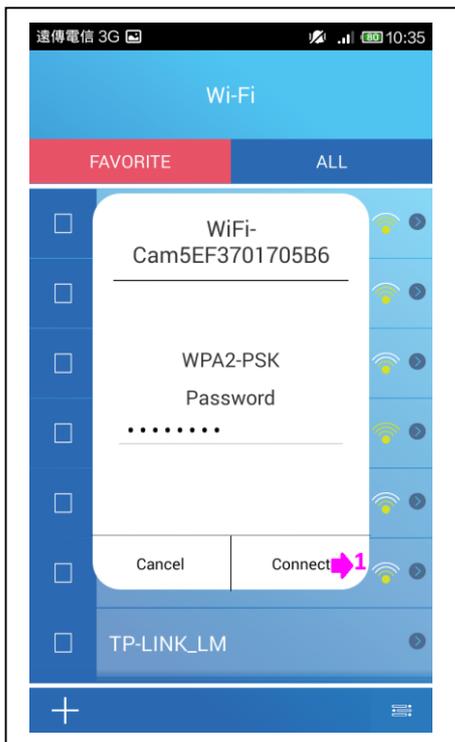


1) WI-FI connection.

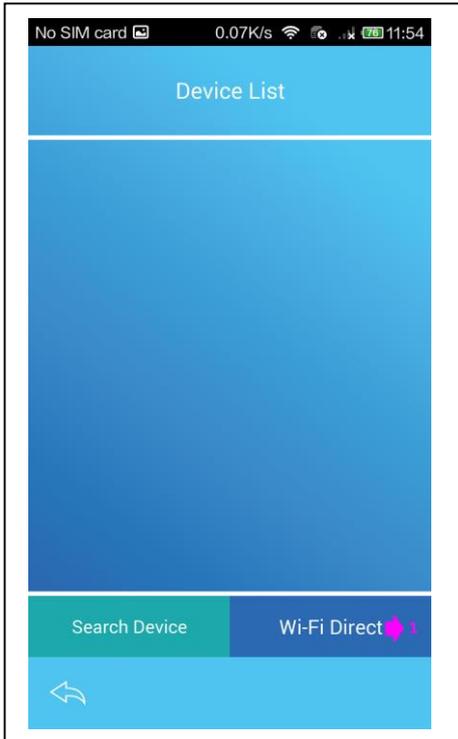

1) Enter WI-FI connection.


* Establish WIFI connection (iOS)

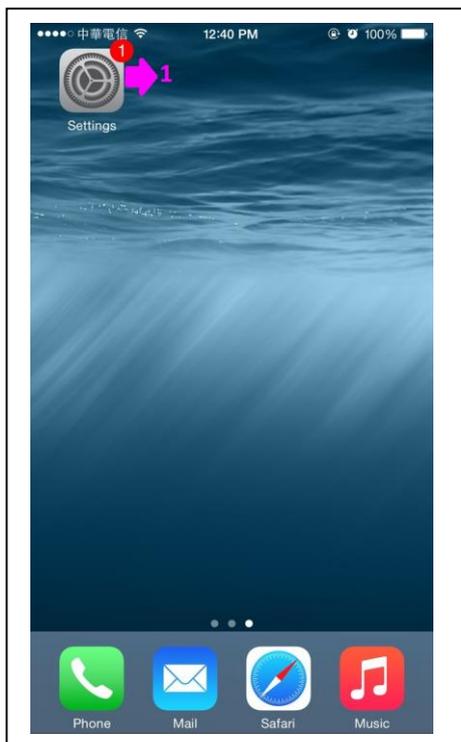


1) Chose settings.




1) Chose Wi-Fi.

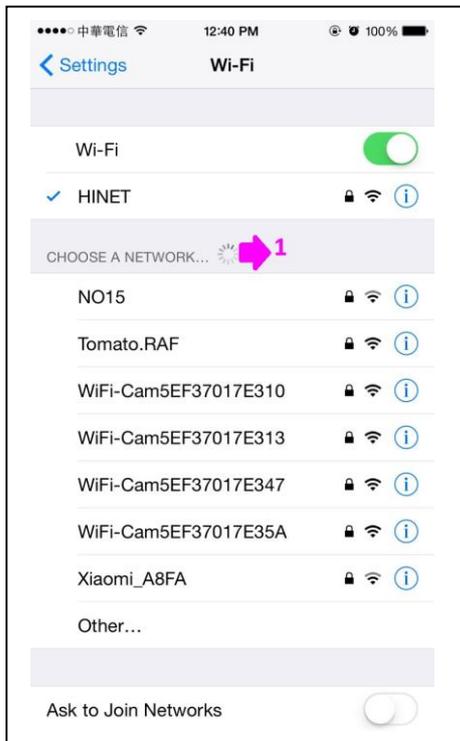

1) Choosing the host's WI-FI which you need to connect.

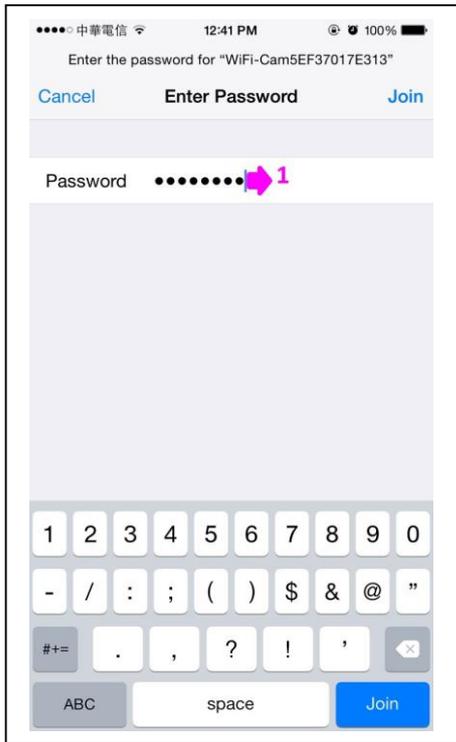


- 1) Enter the password.
(The factory initial password is 12345678)

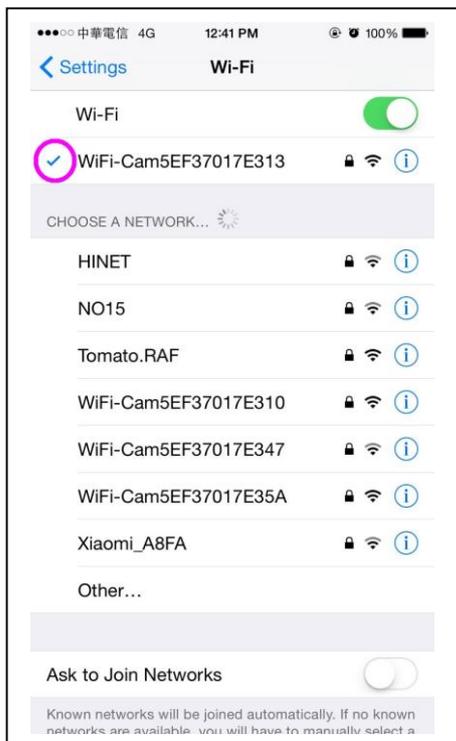


- 1) Confirm WI-FI has been connected.

II. APP UI description

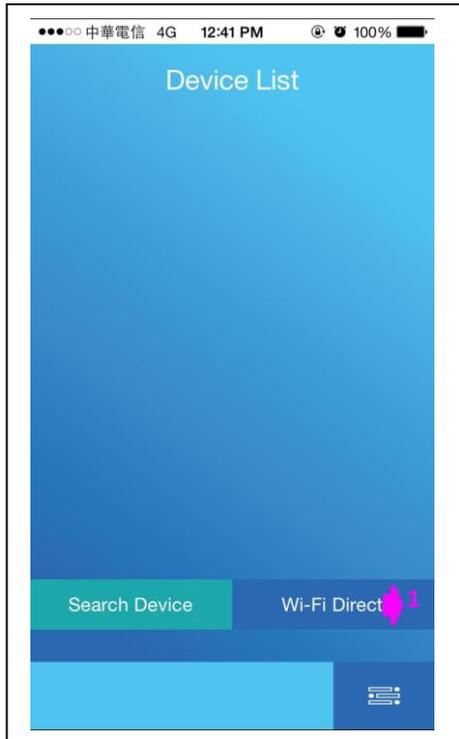

1) Push WI-FI Direct to enter into the preview mode

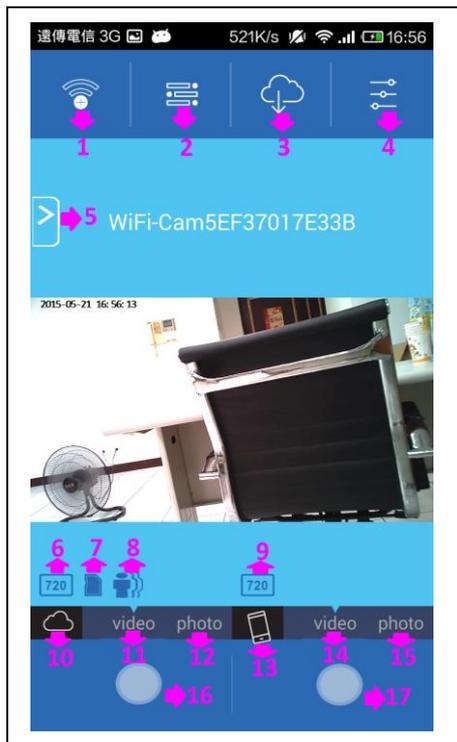

1) Back to WI-FI which you need to connect device list.

2) Cell phone video and Photo archive folder.

3) SD card video host and Photo archive folder.

4) Setting.

5) Quick setting.

6) Host SD card resolution when recording.

7) SD card reminder.

8) Motion detection recording.

9) Resolution when recording.

10) Host SD card recording icon.

11) Host SD card recording.

12) Host SD card photograph.


13) Smartphone recording icon.

14) Smartphone recording.


15) Smartphone photograph.

16) Host SD card recording button.

17) Smartphone recording button

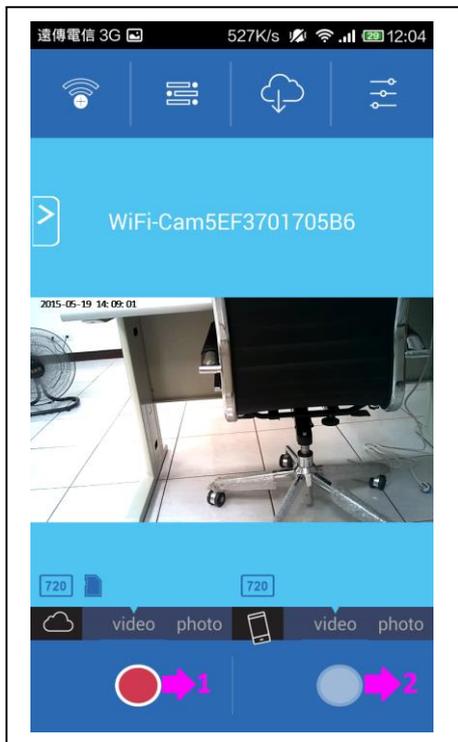

- 1) Host SD card red light constant lighting while recording
- 2) Smartphone recording red light blinking.

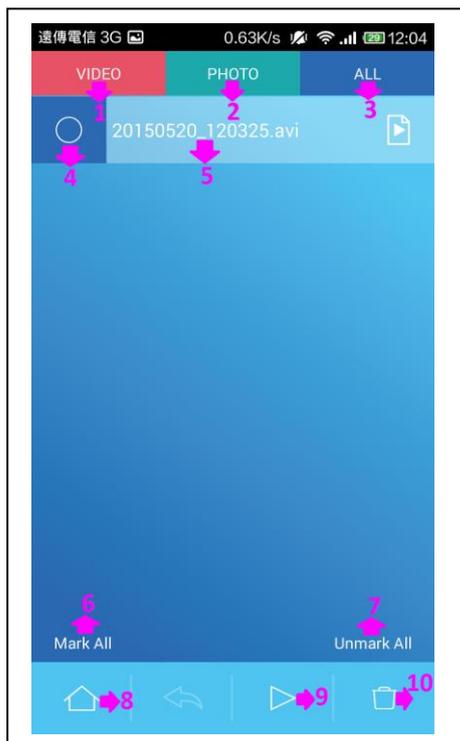


Browsing Mobile Video and Photo Archive Information.

- 1) Film archives.
- 2) Photographic archives.
- 3) Film and photo all archive.
- 4) Mark archive what you need.
- 5) File name.
- 6) Mark all archive.
- 7) Unmark all archive.
- 8) Back to homepage.
- 9) Play button.
- 10) Delete button.




Play The Video File.

- 1) Video playback window.
- 2) Back to last page.
- 3) Pause button.

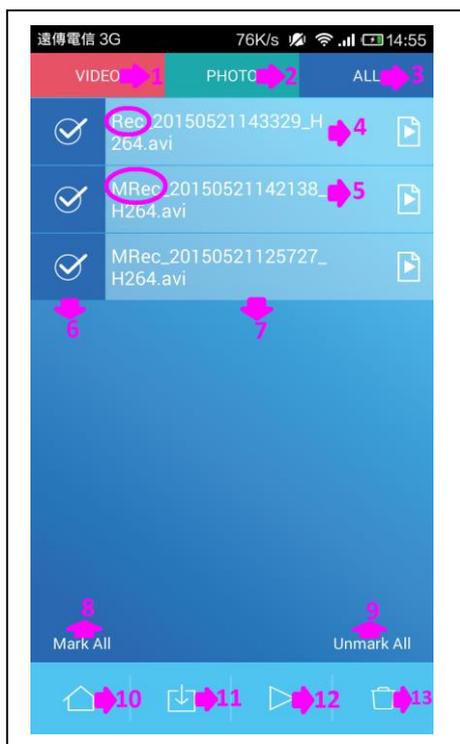

Browsing the Host SD Card Video and Photo Archive Information.


- 1) Film archives.
- 2) Photographic archives.
- 3) Film and photo all archive.
- 4) Continuous video file named beginning with Rec.
- 5) Motion detection recording named beginning with MRec.
- 6) Mark archive what you need.
- 7) File name.
- 8) Mark all archive.
- 9) Unmark all archive.
- 10) Back to homepage.
- 11) Download archive of SD card to smartphone.
- 12) Play button.
- 13) Delete button.

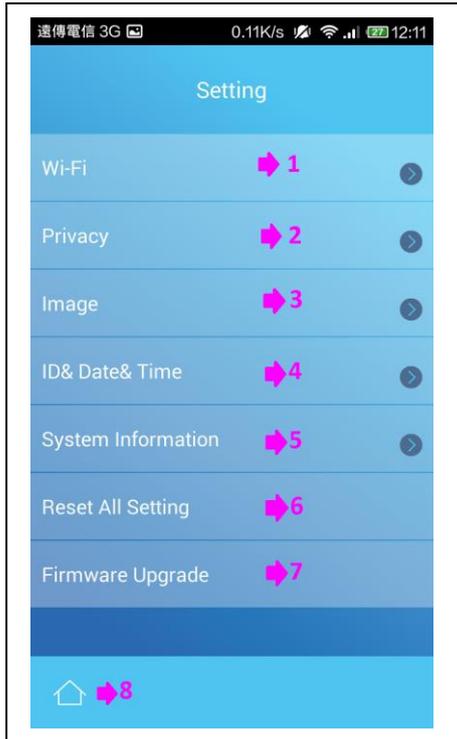


Setting

- 1) WI-FI setting.
- 2) Privacy setting.
(After switch privacy setting, entry APP and enter password.)
- 3) Video setting.
- 4) Date and time setting.
- 5) System information.
- 6) Reset all setting.
- 7) Firmware upgrade.
- 8) Back to homepage.

*Choose APP, In the WI-FI list which you need to connect choose 2 (does not need to connect to host WI-FI), you can view the last connected WI-FI mobile video host 1. Photo archive file has been downloaded to mobile video. And you can view Photo archive files.

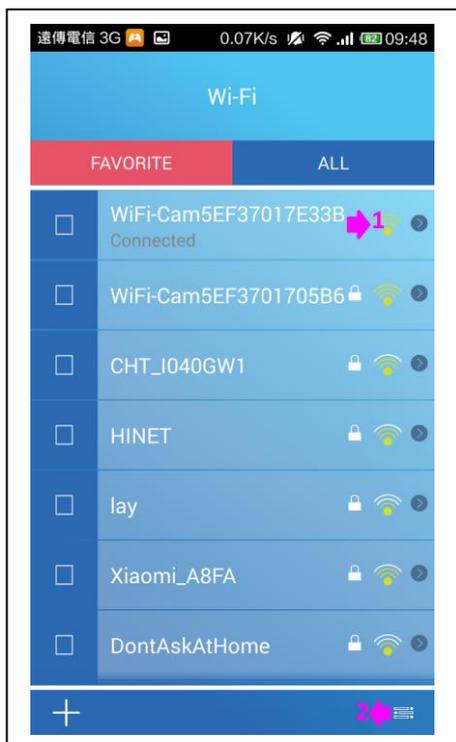

- 1) Last connected WI-FI host.
- 2) Browsing files icon.

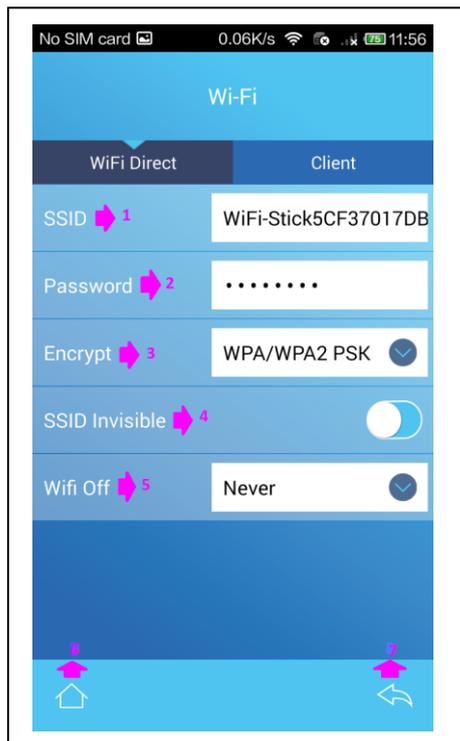

Wi-Fi Setting

1) Wi-Fi host name.

2) Wi-Fi password

*You may change the default password to your preferred here to keep the WIFI connection more confidential


3) Way of encryption.

4) Wi-Fi SSID invisible or not.


5) Host Wi-Fi off.

6) Back to homepage.

7) Back to last page.

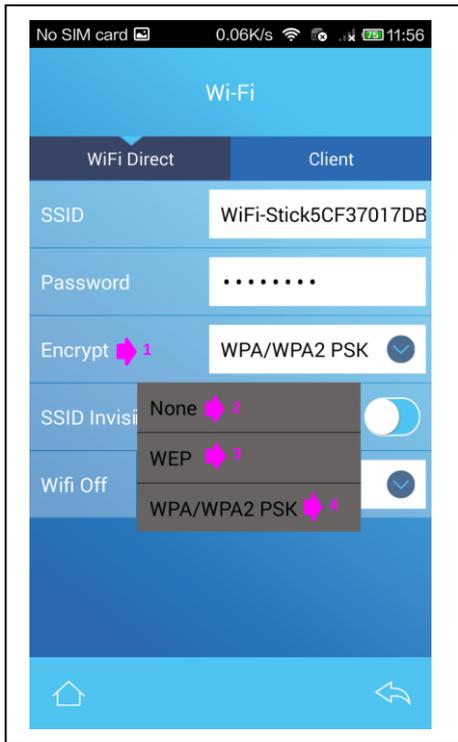

- 1) Way of encryption.
- 2) Visible.
- 3) WEP encrypt(64bit) : Original password 12345.
- 4) WPA/WPA2/PSK encrypt(128bit) :
Original password 12345678.

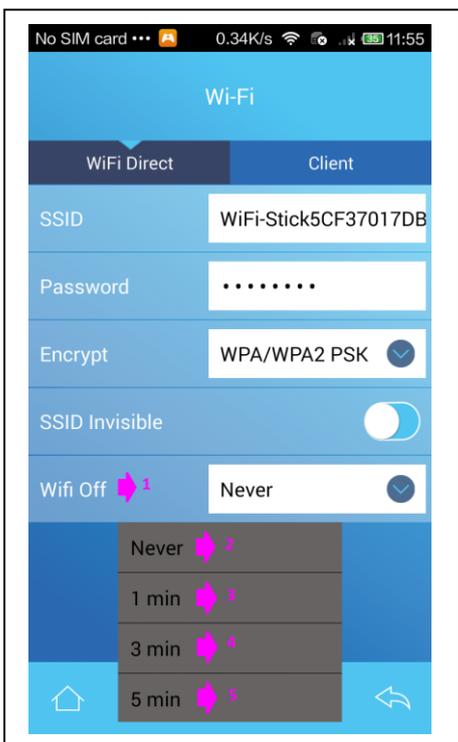


- 1) Unit power on, WI-FI is always off
- 2) Unit power on, WI-FI is always on
- 3) No connection established for 1 minute , WI-FI turn off
- 4) No connection established for 3 minute , WI-FI turn off
- 5) No connection established for 5 minute , WI-FI turn off

*Once WIFI turn off it has to be switched on from the device, can't be opened by the phone remotely

* After changing encryption, you need to entry WI-FI options of the device own and clear connection information of device, then connecting the host with APP again, that changing encryption is successful. (Different smartphone has different operation screen.)



*The way of removing the host WI-FI connection information in Android.

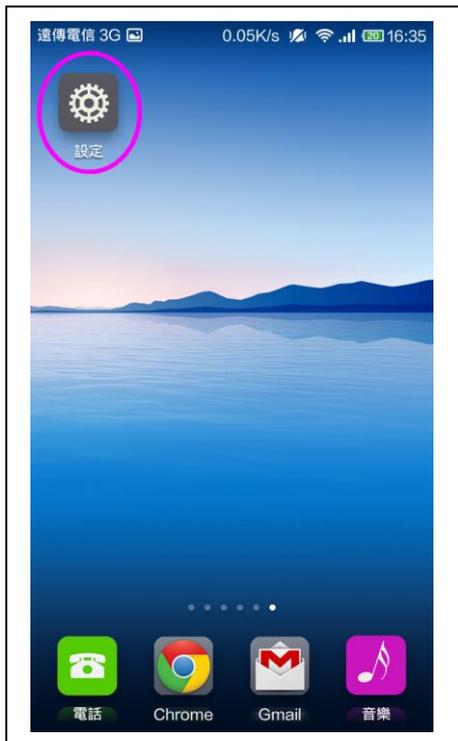




*The way of removing the host WI-FI connection information in iOS.



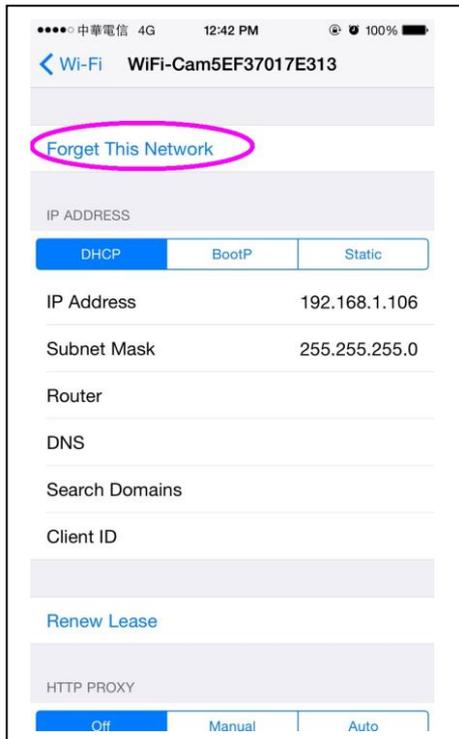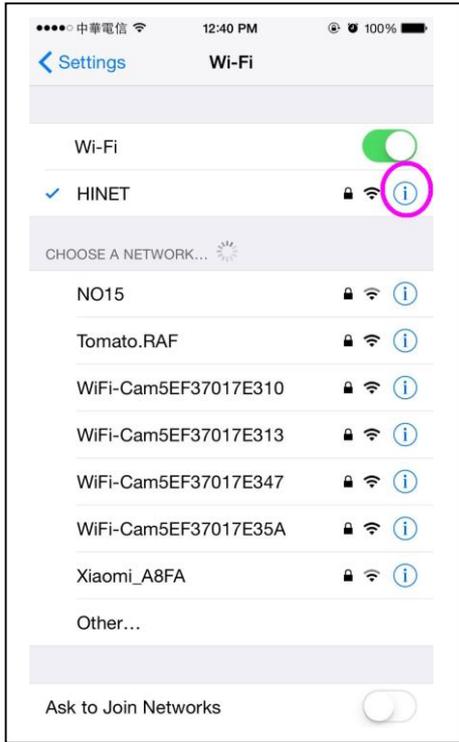

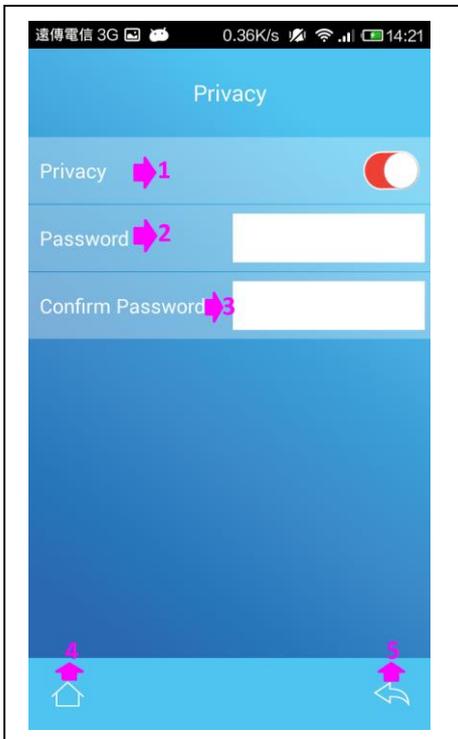

1) Privacy setting. (After privacy on, enter password.)

White doc on the left : Privacy off

White doc on the right : Privacy on

2) Privacy password. (Only number, no word limit.)

3) Confirm password again.

4) Back to homepage.

5) Back to last page

*Be aware the privacy function only lock on the running of this APP, all other functions in the phone remain normally.

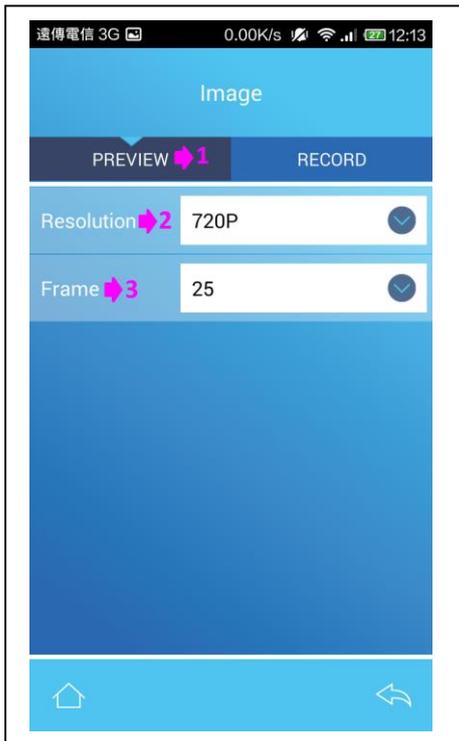


Image Setting

- 1) Play parameters.
- 2) Resolution. (D1 、 720P)
- 3) Frame choice. (10 、 15 、 20 、 25)


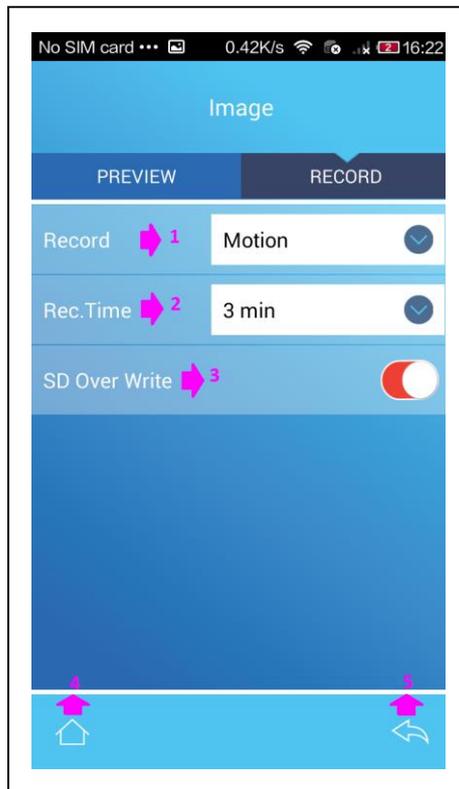


Image Setting

- 1) Recording model.
 - (Continuous recording and Motion detecting video.)
 - *When execute the motion record, after setting it up in the menu, it need to be pushed once for the either record button on the preview page to start to operate.
- 2) Recording time. (1 、 3 、 5 、 10 min)
- 3) SD Over Write :
 - White dot on the left : Overwrite Setting off.
 - White dot on the right : Overwrite Setting on.
- 4) Back to homepage.
- 5) Back to last page.

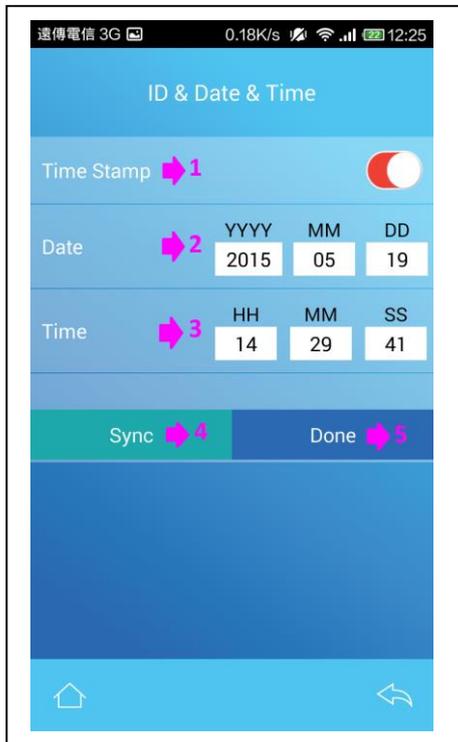

Date and Time Setting

1) Time display function :

White dot on the left : Date display close.


White dot on the right : Date display open.

2) Date format.

3) Time format.

4) Synchronization with device time.

5) Confirm the setting.

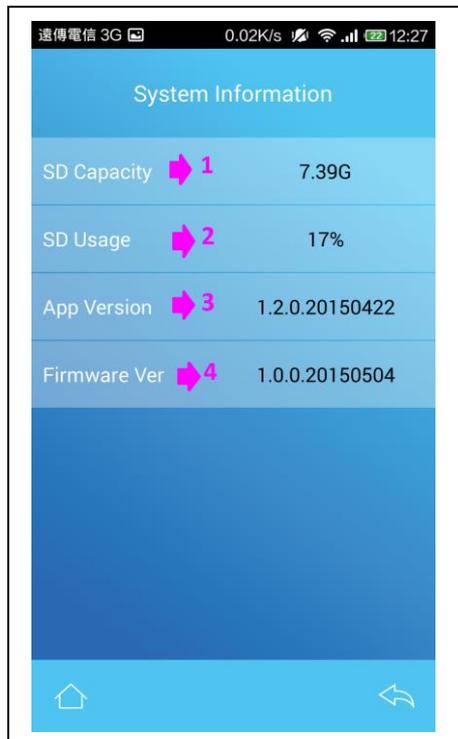

System Information

1) Card Memory Capacity.


2) Card Memory Usage rate.

3) APP Version.


4) Device initial firmware version.

* Upgrading method of devices :

Saving the initial firmware on Micro SD card then put the card into device, connecting device with APP and choose initial firmware version.

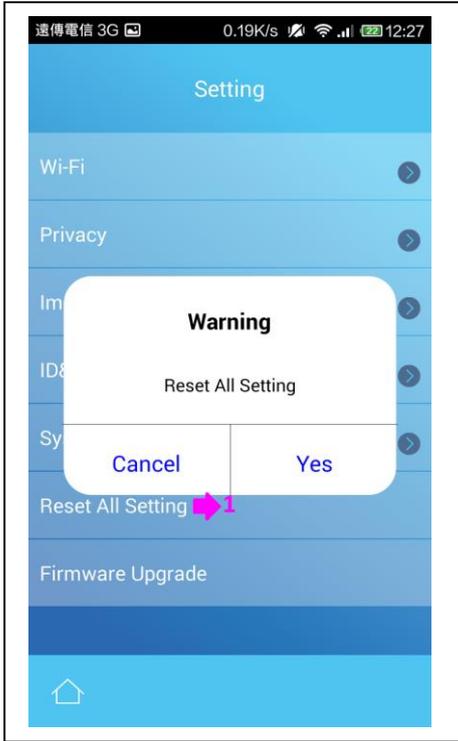


1) Reset all setting.

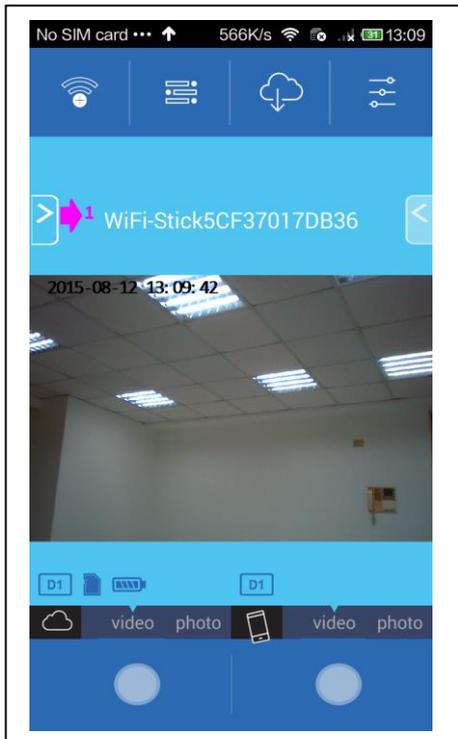

1) Hot key for the spy mode page



- 1) Go out from spy mode page by sliding it from right to left

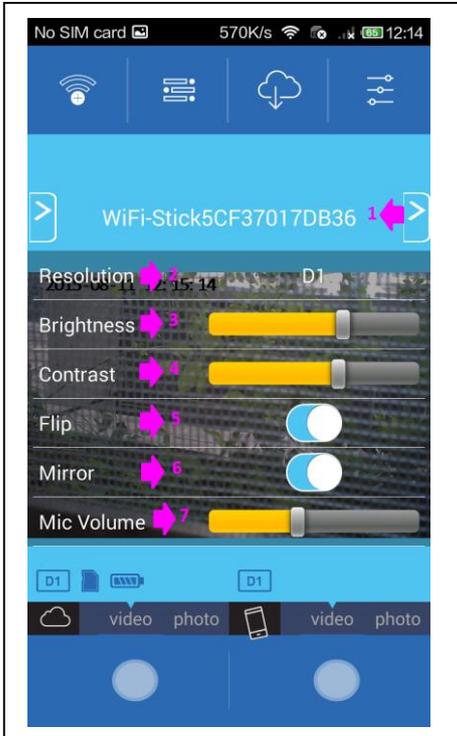

- 1) Quick setting.
- 2) Resolution setting. (D1 、 720P)
- 3) Brightness setting.
- 4) Contrast setting.
- 5) Flip Top to Bottom.
- 6) Mirror left-right model.
- 7) Mic volume when recording.